MT2090 Setup

The Motorola MT2090 is a Bluetooth/WiFi wireless barcode scanner capable of scanning most formats of barcode used to identify tapes.



The MT2090 can be connected:

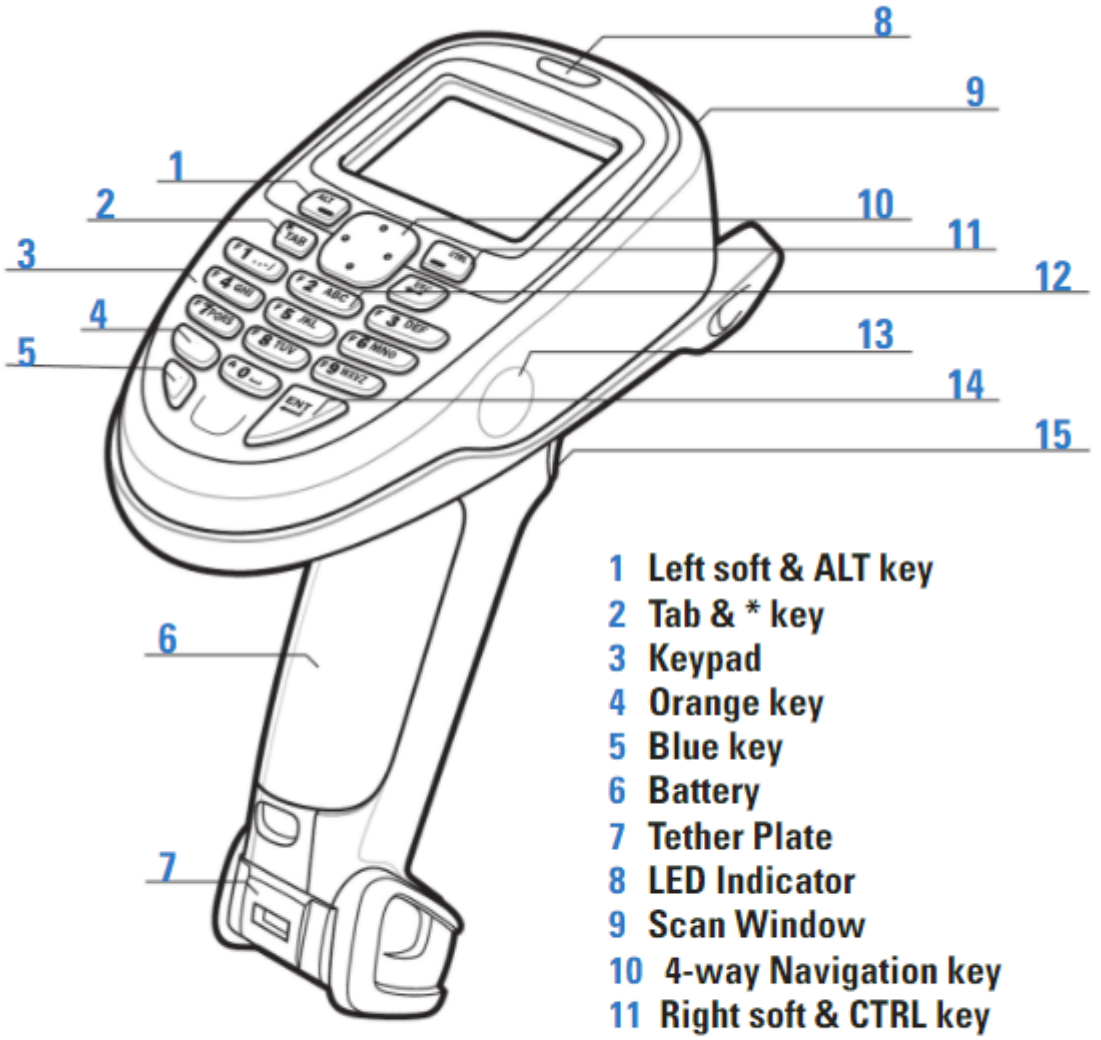
1. Directly to a PC via a USB Synapse,
2. Paired directly with a PC via a Bluetooth connection, or
3. Paired with a pairing cradle unit, which then connects to a PC via a USB Synapse.

It is recommended that a pairing cradle be used as this allows wireless flexibility without the technical overhead of having to pair the scanner directly to a PC via Bluetooth (many corporate PCs also don't have Bluetooth adapters).

Components

The recommended setup for a MT2090 is:

1. MT2090 Scanner: Part Number `MT2090-SL0D62370WR`
2. Bluetooth Pairing Cradle: Part Number `STB2078-C10007WR`


1 Left soft & ALT key
2 Tab & * key
3 Keypad
4 Orange key
5 Blue key
6 Battery
7 Tether Plate
8 LED Indicator
9 Scan Window
10 4-way Navigation key
11 Right soft & CTRL key
12 Cold boot trigger
13 LED Indicator (MT2090 Only)
14 Enter key
15 Scan Trigger

Auto Enter


1
SCAN OPTIONS
2
<DATA><SUFFIX>
3

From:
https://docs.tapetrack.com/ - **TapeTrack Documentation**

Permanent link:
https://docs.tapetrack.com/barcode/mt2090_setup?rev=1498252352

Last update: **2025/01/21 22:07**