MT2090 Setup

The Motorola MT2090 is a Bluetooth/WiFi wireless barcode scanner capable of scanning most formats of barcode used to identify tapes.



The MT2090 can be connected:

1. Directly to a PC via a USB Synapse,
2. Paired directly with a PC via a Bluetooth connection, or
3. Paired with a pairing cradle unit, which then connects to a PC via a USB Synapse.


It is recommended that a pairing cradle be used as this allows wireless flexibility without the technical overhead of having to pair the scanner directly to a PC via Bluetooth (many corporate PCs also don't have Bluetooth adapters).

Components

The recommended setup for a MT2090 is:

1. MT2090 Scanner: Part Number `MT2090-SL0D62370WR`
2. Bluetooth Pairing Cradle: Part Number `STB2078-C10007WR`

Scanner Features

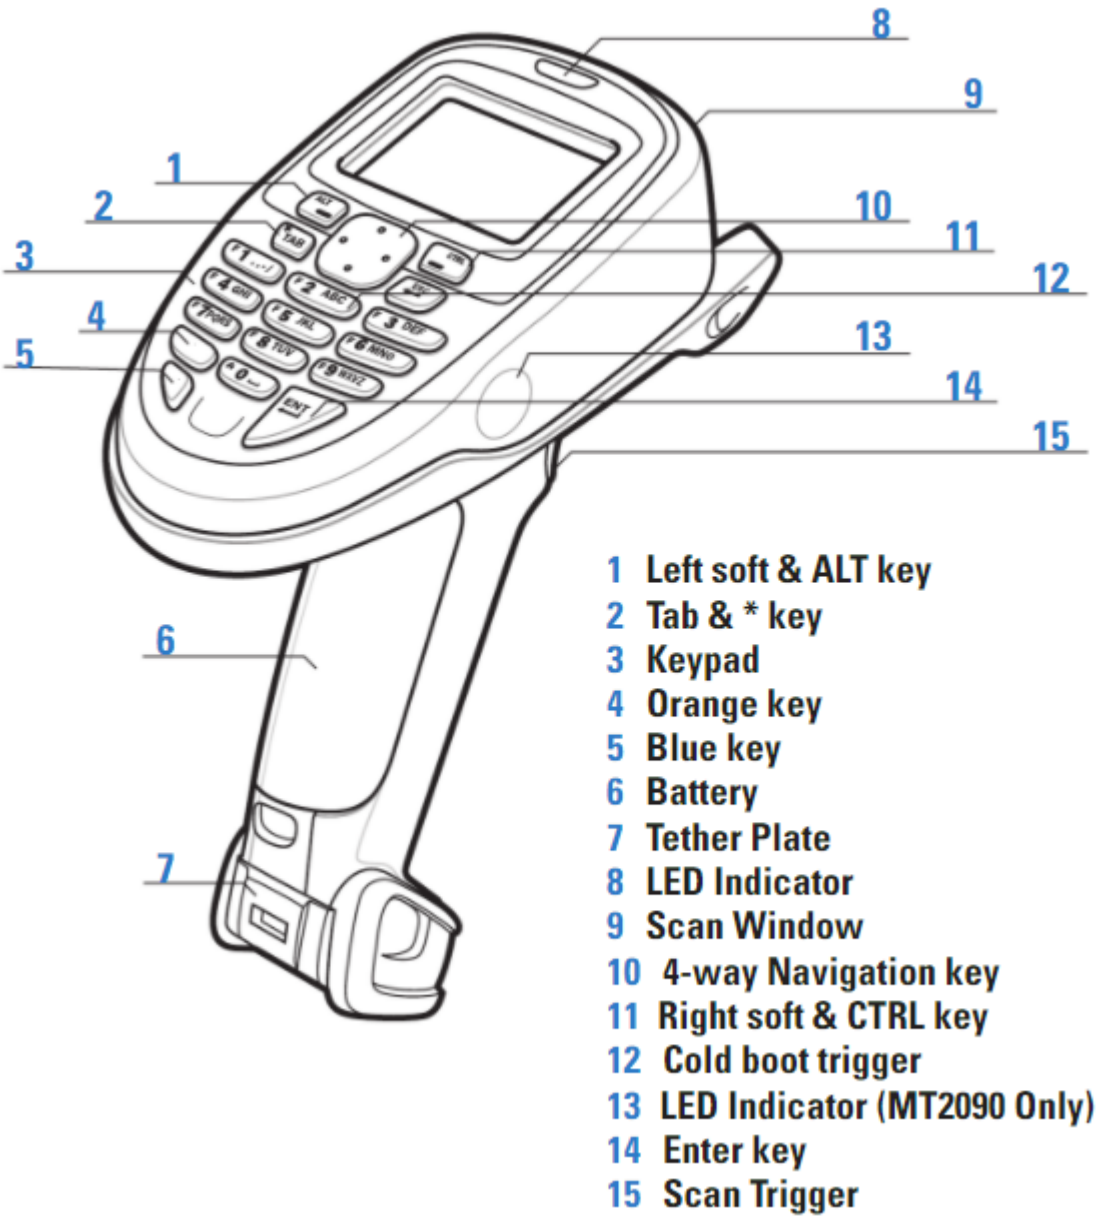

Cradle Cables


The STB2078-C10007WR cradle has two cable connections:

- **A**
- **B**



Auto Enter

By default the scanner will not send an enter after each scan. To enable auto-enter, scan the following barcodes.

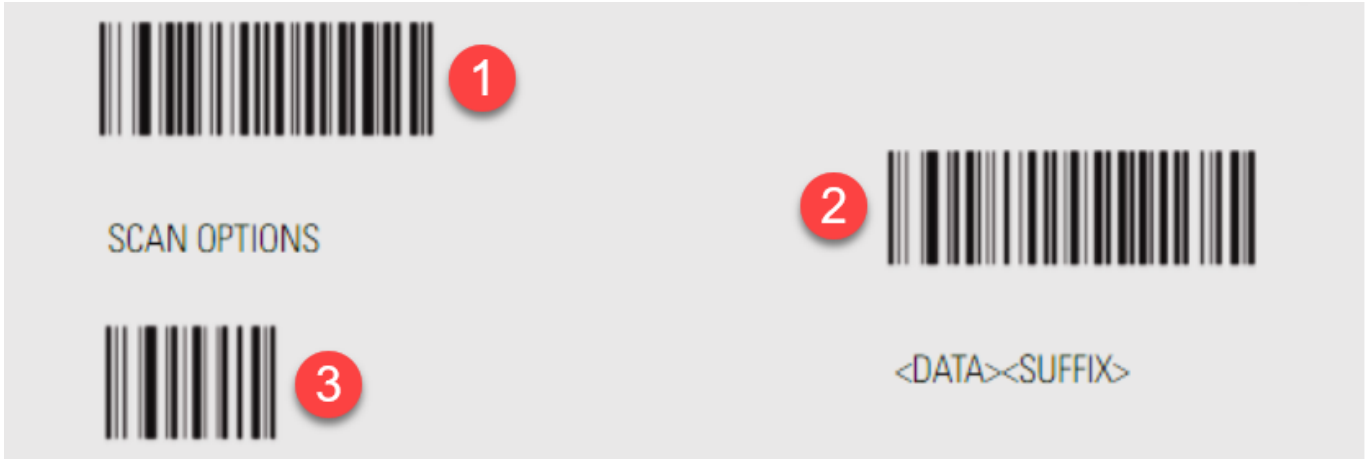

From:
https://docs.tapetrack.com/ - **TapeTrack Documentation**

Permanent link:
https://docs.tapetrack.com/barcode/mt2090_setup?rev=1498253060

Last update: **2025/01/21 22:07**